




TRON INSTALLATION GUIDE

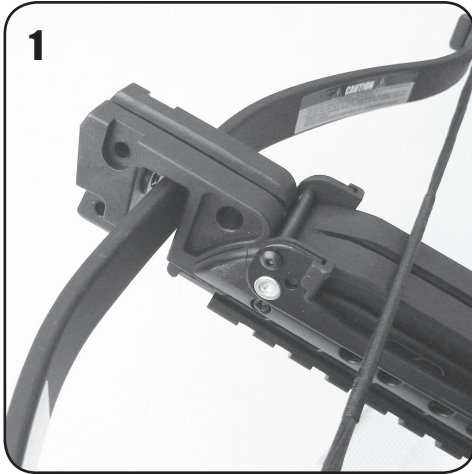


1
Insert the limb into the stock as shown with the bow string on the surface rail (Pic 1).

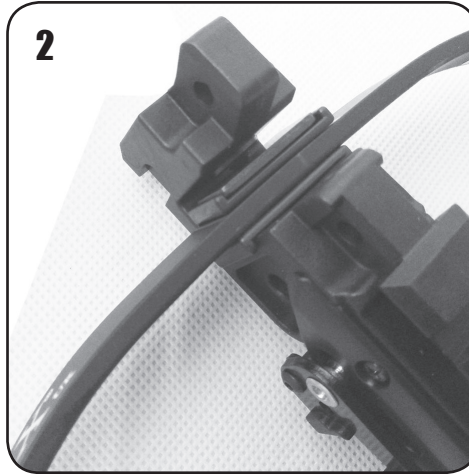


2
Then place one plastic plate at the back of the limb and a plastic plate in front of the limb, with a metal plate held in place with the front plate (Pic 2). **DO NOT SCREW THE LIMB BOLT INTO THE FRONT STOCK AT THIS POINT!**

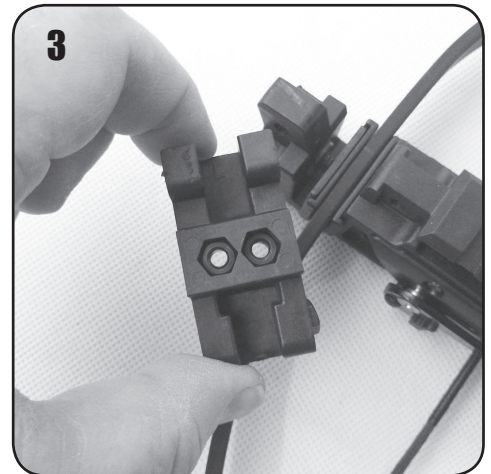



3
Insert the two nuts into the two holes in the limb base plate (Pic 3). Then turn the base plate over and fit into the front stock using the slots as shown.

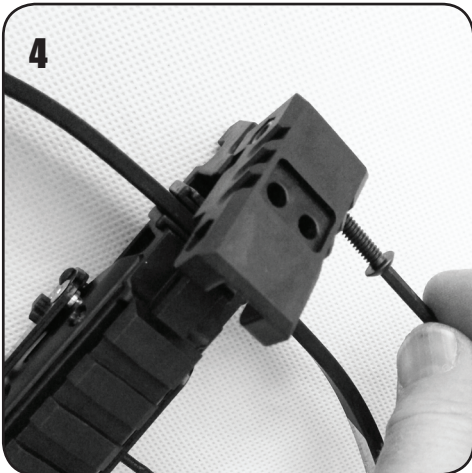


4
Insert the two screws, and nuts into the limb base plate and tighten down using the allen/hex key supplied (Pic 4/5).

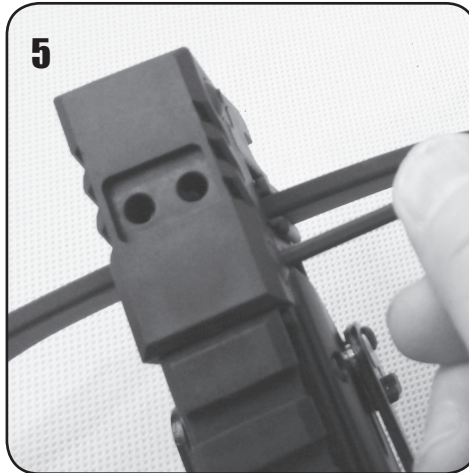


5
Once the base plate has been secured in place, then you can tighten the limb bolt into the front stock. (Pic 6).

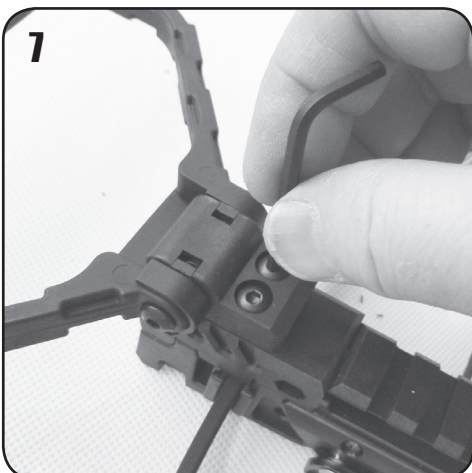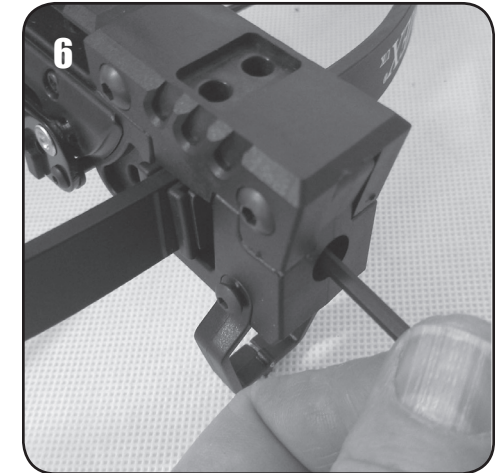

7
Using the two screws supplied with the foot stirrup, tighten down using the allen/hex key supplied (Pic 7).

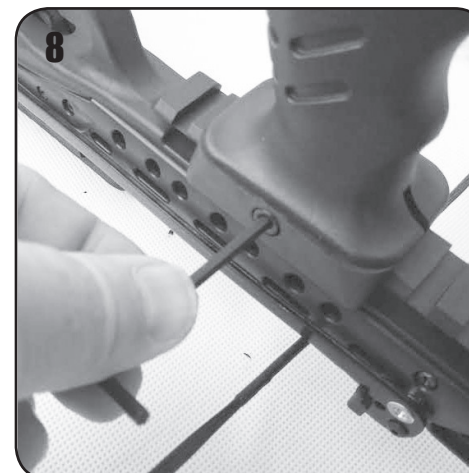

8
Place the tactical foregrip on the rail and tighten down using the allen/hex key supplied (Pic 8).

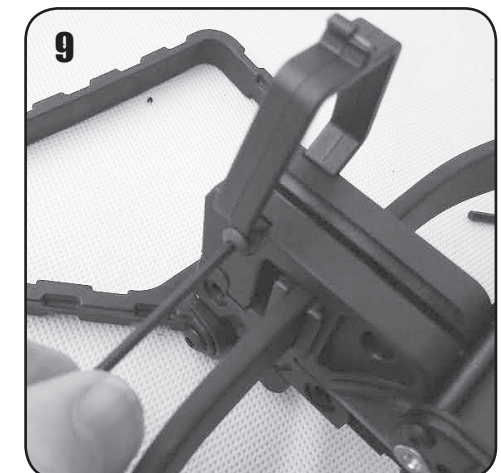

9
The front sight fits into the two slots on the stock and tighten down using the screws supplied (Pic 9).